



Container with active shipment Opticooler - most important handling items

1. When leaving a Warehouse Battery capacity Temperature program is running	min. 95% (P1/P2/P3)
2. Transport	
Trucking (upon loading onto a truck*) Battery capacity Temperature program is running Reefer truck temperature* = <small>*(We recommend a reefer truck)</small>	min. 95% (P1/P2/P3) Container Set Temperature
Flight (upon loading on aircraft) Battery capacity Temperature program is running	min. 70% (P1/P2/P3)
3. Arrival (Destination/Hub/etc.) Plug in container immediately after arrival	
4. Final Destination Switch off container only if the goods have been removed Charge container up to 100%	

We are available 24/7 in any cases you need help with
Phone: **+49 (0) 6142 - 836 938 12** or E-mail: **request@dokasch-ts.com**