



Container with active shipment Opticooler - most important handling items

1. When leaving a Warehouse Battery capacity Temperature program is running	min. 95% (P1/P2/P3)
2. Transport	
Trucking (upon loading onto a truck) Battery capacity Temperature program is running Truck temperature =	min. 95% (P1/P2/P3) Container Set Temperature
Flight (upon loading on aircraft) Battery capacity Temperature program is running	min. 70% (P1/P2/P3)
3. Arrival (Destination/Hub/etc.) Plug in container immediately after arrival	
4. Final Destination Switch off container only if the goods have been removed Charge container up to 100%	